



Spring Lock alat za otvaranje

Pažnja!
Prije otvaranja Spring Lock spoja, klima uređaj mora biti ispražnjen od rashladnog sredstva i bez pritiska.

Alat za otvaranje Spring Lock spojeva postaviti kao manžetu oko spoja tako da usna alata leži iza oprugastog prstena (A). Zatvoriti alat i gurnuti ga u pravcu opružnog prstena (B). U ovoj poziciji možete otvoriti Spring Lock spoj (C). Alat za otvaranje Spring Lock spoja otvoriti i skinuti sa spojnog mjesta (D).

